



NOTE: THIS TRANSITION MAY ALSO BE USED WITH WOOD POSTS (PDE02) OR BLOCKOUTS (PDB01 & PDB02)

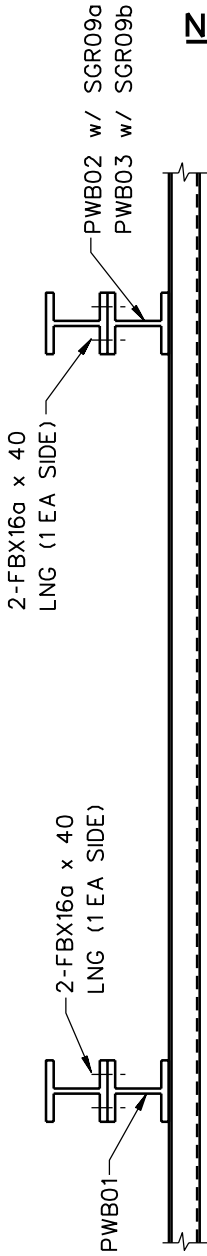

PLAN

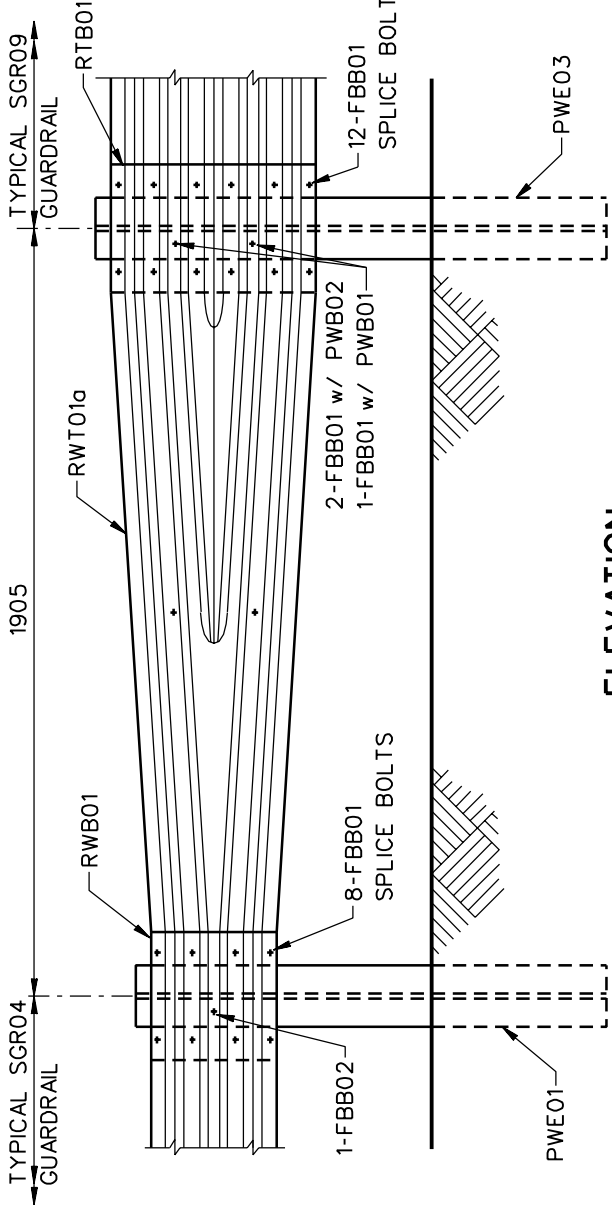

ELEVATION

W- TO THRIE-BEAM TRANSITION

STG01

SHEET NO.	REF. NO.
1 of 2	